

## GETTING CONNECTED

There are two modes of wireless communication:

. E042\$



 
### BT mode - SPP

1. Press the trigger for 1 second to activate the scanner.
2. Scan **[DISCONNECT]**
3. Scan **[BT mode - SPP]**; the scanner will emit 8 beeps.
4. Select "Wireless Scanner" from discovered device list.  
The default pincode is "1234".
5. Open serial communication software with com port  
(see Device Manager) properly set up.
6. The scanner will beep twice to verify the connection.

. E043\$



### BT mode - HID

1. Press the trigger for 1 second to activate the scanner.
2. Scan **[DISCONNECT]**
3. Scan **[BT mode - HID]**; the scanner will emit 8 beeps.
4. Select "Wireless Scanner" from discovered device list.
5. The Bluetooth application may prompt you to scan  
a pincode(see **PINCODE SETUP**  section) it generated.
6. The scanner will beep twice to verify the connection.

. E031\$



### Disconnect

## PINCODE SETUP


STEP 1

### Pincode Start

. E032\$



STEP 2

Scan numeric barcodes (see **NUMERIC BARCODES**  section on the back page) based on the pincode generated by the Bluetooth application.

STEP 3

Enter

\$TX



STEP 4

### Pincode Stop

. E033\$





**1**

**6**



**2**

**7**



**3**

**8**



**4**

**9**



**5**

**0**

