


MB110 Multi I/O Board Integration Guide

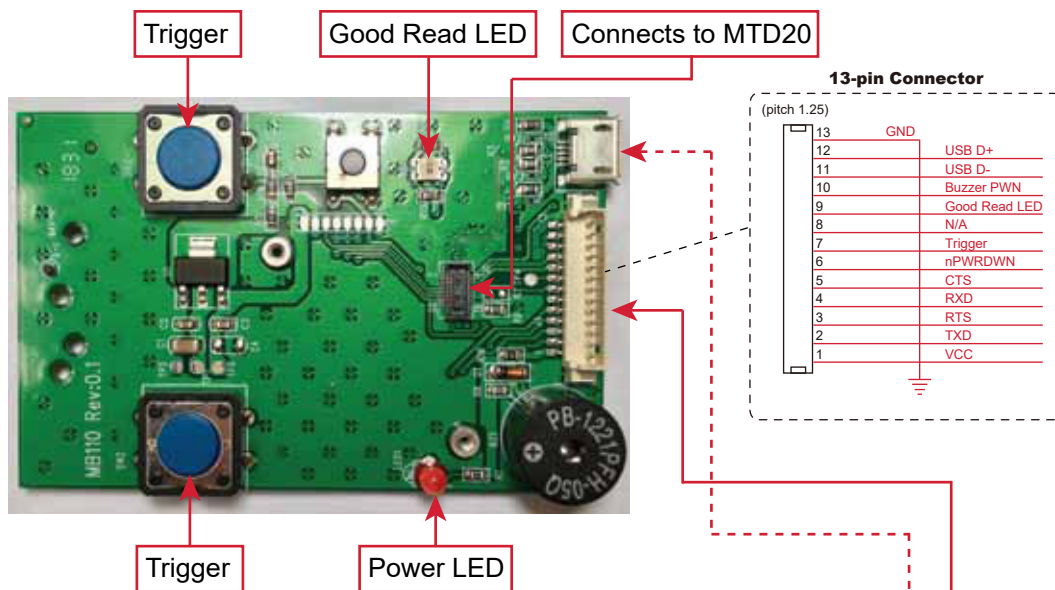

Interface/Cable Matrix


O: Supported X: Not Supported

Cable \ Interface	RS232	USB HID	USB VCP*
External Y-cable (P/N: 7090-1583A00)	O	O	O
Micro USB cable (P/N: 7005-9892A50)	X	O	O

*Note: For VCP driver (Windows 32/64-bit OS) please visit www.marson.com.tw for the latest documentation and downloads.

External Y-cable

(P/N: 7090-1583A00)

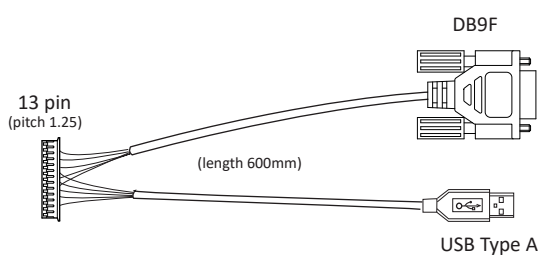

D-sub 9 Female Connector

Pin	Signal
2	TXD(Out)
3	RXD(In)
5	GND
7	CTS(In)
8	RTS(Out)
9	VCC

*Note: Power supply can be provided by the USB cable or directly from PIN 9 of the DB9F connector.

MB110 Multi I/O Board

(P/N: 21B0-204A000)

(unit = mm)

