

Ez One Shot[®]

1D WIRELESS SCANNER USER'S MANUAL



CONTENTS

PREFACE

Table of Contents.....	2
Cloning Mode.....	3-4
How to set up the parameter.....	5

GENERAL SETTINGS (GROUP 1 - 17, PAGE 6 - 22)

1 Default, Abort, Check Version, Setup Code Read, Vibrator.....	6
2 Reading Mode	7
3~4 Advanced Reading Mode Settings.....	8-9
5 Laser Brightness, Illumination.....	10
6 Beep tone, Beep Mode, Terminator.....	11
7 Send Data Length, Preamble, Postamble.....	12
8 Accuracy Adjustment.....	13
9 Inverse Barcode, Code ID.....	14
10 Symbologies Code Identifier.....	15
11~12 Set Code ID.....	16-17
13~14 Inter-block and Inter-character Delay.....	18-19
14 Function Code Conversion, HT/CR/ESC Converts to Tab/Enter/Escape.....	19
15 Keyboard Layout.....	20
16 Capital Lock Mode, Numeric Key.....	21
17 Interface.....	22

WIRELESS SETTINGS (GROUP 18 - 30, PAGE 23 - 35)

18 Bluetooth Profile.....	23
19 Pincode Setup.....	24
20 Getting Connected, Touch Keyboard.....	25
21 iOS Hotkey, Set Function Button.....	26
22 Power Off Timeout.....	27
23 Set Bluetooth Device ID.....	28
24 Set SPP Pincode.....	29
25 ScanLink (SPP/HID Master Mode).....	30
26 SPP Remote Control, Shut Down.....	31
27 Batch Mode, Binary Check Character.....	32
28 Memory Mode - Memory Mode, Delete Record....	33
29 Memory Mode - Data Format, Date & Time Setup	34
30 Memory Mode - Date Format, Time Format.....	35

SYMBOLOGIES (GROUP 31 - 48, PAGE 36 - 53)

31~33 Enable/Disable Barcode Symbology.....	36-38
33 China Postal Code(Toshiba Code).....	38
34 MSI code, UK Plessey code.....	39
35 Code 93, IATA, Telepen.....	40
36 Interleaved 2 of 5, Code 11.....	41
37 Industrial 2 of 5, Matrix 2 of 5.....	42
38 Codabar.....	43
39 ABC Codabar, CX Codabar.....	44
40 Codabar Coupling.....	45
41 Code 39 (Full ASCII/Standard), Code 32.....	46
42 UPC-E.....	47
43 UPC-E System Number, UPC-E Expand to UPC-A	48
44 UPC-A.....	49
45 EAN-8.....	50
46 EAN-13, ISSN, ISBN, ISMN.....	51
47 EAN/UCC/GS1-128, Code 128.....	52
48 GS1 DataBar Stacked, Limited, Expanded.....	53

FULL ASCII(CODE39)TABLE, FUNCTION KEY TABLE(GROUP 38 - 49, PAGE 43 - 54)

49~57 Full ASCII table(Code 39).....	54-62
58~60 Function Key table(Code 39).....	63-65

APPENDIX

Appendix 1 Default table.....	66-69
-------------------------------	-------

CLONING MODE

WHAT IS CLONING MODE?

CLONING duplicates a scanner's settings in other scanners. It can save time when a number of scanners must be programmed to the same settings.

HOW SHOULD CLONING WORK?

1. Using this guide, make all the necessary settings for one wand.
2. Scan the CLONING MODE bar code shown below.
3. When CLONING MODE is scanned, all setup parameters will be converted to alphanumeric characters and shown on the monitor.
4. Using a bar code printer, print out all the setup parameters as Code 39 bar code labels.
5. Scan the printed labels sequentially with each wand to be programmed.



NOTES:

1. All cloning strings are upper case.
2. All cloning strings printed on labels should be the same as those on the monitor sequentially from first to last.
3. Cloning mode works in Word Note Pad only.
4. Never edit the data on the first row (.A017\$). It is an entry command for cloning.
5. The cloning string's length can be adjusted by combining multiple strings into one, or by breaking one string into multiple strings starting from the second row after "...". Length must be in sequences of four, such as 4, 8, 12, 16, 20 (MAX).
6. Be sure to print the dots exactly where they are shown on the monitor.

FORMAT OF CLONING

* Format of Cloning:

1st row >>> ".A017\$" (never edit any data of the first row)

2nd row >>> "...XXXX" you can adjust the String's Length starting from the dots "..." forward. The length of the string should be in 4, 8, 12, 16 or 20 (MAX)digits.

3rd row ~ so on >>> XXXX

End row - A dot "." Is the ending of cloning.

XXXX Stands for any string

CLONING MODE

EXAMPLE :

1. PROJECT ASSIGNMENTS:

- 1.1. Beep tone: **BEEP LOW**
- 1.2. Capslock Mode: **CAPSLOCK ON.**
- 1.3. Reading Mode: **CONTINUOUS AUTO OFF.**


2. SETTING PROCEDURE:

- 2.1. Scan **BEEP LOW (GROUP 6).**
- 2.2. Scan **CAPSLOCK ON (GROUP 16).**
- 2.3. Scan **CONTINUOUS AUTO OFF (GROUP2).**

3. All parameters will be converted to alphanumeric characters and shown on the monitor.



4. Print the results shown on the monitor as bar codes with a bar code printer. The bar codes should be in the Code 39 symbology.

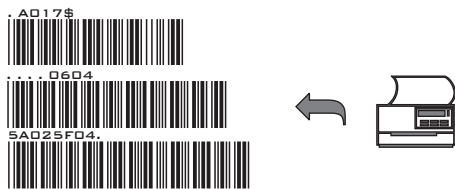

5. Scan these labels with any of the wands that must be programmed with the same settings as the first wand. Be sure to scan from the first row to the second and so on sequentially, top to bottom.

CORRECT SETTING

.A017\$ 0604 5A02 5F04 .	4 4 4 4 . (Dot)	.A017\$06045A02 5F04. 4+.(Dot)	12 4+.(Dot)
--	-----------------------------	--	----------------

WRONG SETTING

.A017\$..0604 5A02 5F04 .	←	Wrong Setting: The string "..." consists of 4 Dots, located at the beginning of second row; do not break the "..." into multiple strings.
.A017\$06045 A025F04 .	✓ 9 x } ← 7 x } ← . (Dot) ✓	Wrong Setting: The string lengths of the second and third row do not match the length requirements, because rows should be in length of four digits.
.A017\$.... 0604 5A02 5F04.	X ← 4 ✓ 4 ✓ 4+.(Dot) ✓	Wrong Setting because you add "..." after .A017\$: The .A017\$ is a FIXED parameter to enter setup procedure. It is an unchangeable parameter. Never add, delete or rearrange data from the FIRST row.

HOW TO SET PARAMETERS

How do you program a scanner with this user's guide?

1. Use the scanner to scan at the barcode representing the function/parameter you want to set.
2. When you hear two beeps, the new settings have been defined or updated into the memory processor.

Default parameters are indicated in bold type and underlined characters. The character font is ARIAL BLACK. CD = Check Digit. CDV = Check Digit Verification.

Most settings require only a single barcode, but a few need several different barcodes (multi-step configuration) to be scanned in order to completely define a setting. They are:

Preamble / Postamble (maximum 16 digits)

Step 1: Scan CLR PRE/POSTAMBLE.

Step 2: Scan PREAMBLE or POSTAMBLE.

Step 3: Scan any alphanumeric from Full ASCII table in Group 49-60

Step 4: Scan PREAMBLE or POSTAMBLE.

Min Length / Max Length

Step 1: Scan MIN LENGTH or MAX LENGTH.

Step 2: Scan two digits from Full ASCII numeric table in Group 57

Step 3: Scan MIN LENGTH or MAX LENGTH.

Accuracy Adjustment

Step 1: Scan ACCURACY ADJUSTMENT.

Step 2: Scan one digit from GROUP 8

Step 3: Scan ACCURACY ADJUSTMENT.

Set Code ID (Example: Code 39)

Step 1: Scan CODE 39 SET ID from Group 11

Step 2: Scan either one or two alphanumerics (maximum 2 digits) from Full ASCII table in Group 51-57

Step 3: Scan CODE 39 SET ID from Group 11

Set A Data - (CX-Codabar, ABC Codabar, Codabar Coupling).

Step 1: Scan SET INSERT DATA.

Step 2: Scan one alphanumeric character from Full ASCII Table in Group 51-57

Step 3: Scan SET INSERT DATA.

NOTE:

1. The scanner will beep three times as indication that a setting is not yet complete or unexpected barcode is scanned during multi-step configuration.
2. If you make a mistake, forget a step, etc., and want to abort the multi-step configuration, scan RESET/ABORT and start over again.

RESET / ABORT



GROUP-1

GENERAL SETTINGS

DEFAULT

.A001\$



*Reset to factory default

CHECK VERSION

.A007\$



*Check firmware version

RESET/ ABORT

.P023\$



*Abort multi-step configuration

SETUP CODE READ

.B015\$



SETUP CODE ON

.B016\$



SETUP CODE OFF

*Caution: Scanning SETUP CODE OFF will turn the scanner into unprogrammable state and the scanner will not react to any configuration barcode!

VIBRATOR

.D035\$



VIBRATOR OFF

.D034\$



VIBRATOR ON

NOTE:

1. Not supported by MT100A, MT3000LB.

GROUP-2

READING MODE

. F005\$



CONTINUOUS MODE

- * LED is always on.
- * The trigger does not function in Continuous Mode.

. F001\$



FLASH MODE

- * The LED is on steady if a barcode is close to the scanner, but starts flashing if no barcode is detected after 60 seconds.
- * The trigger does not function in Flash Mode.

. F002\$



TRIGGER MODE

- * The LED will turn on when the trigger is pressed.
- * The LED will turn off when the trigger is released.

. F006\$



CONTINUOUS AUTO OFF

- * The LED is always on when the trigger is pressed.
- * The LED will go off if no barcode has been detected after 60 seconds.

. F003\$



TOGGLE MODE

- * The LED is always on when the trigger is pressed.
- * The LED will go off if one barcode is read.

. F004\$



TEST MODE

- * Factory Scanability Test Use Only

GROUP-3

ADVANCED READING MODE SETTINGS

LED AUTO-OFF CONTROL (TRIGGER & TOGGLE MODE)

. F038\$



LED AUTO OFF DISABLE

. F039\$



LED AUTO OFF ENABLE

NOTE:

1. When enabled, LED will automatically go off after LED Auto-Off Timeout elapses.
-

LED AUTO-OFF TIMEOUT (TRIGGER, TOGGLE, FLASH, CONTINUOUS AUTO OFF MODE)

. F043\$



LED AUTO OFF TIMEOUT
(DEFAULT = 60 SEC)

STEPS:

1. Scan LED AUTO-OFF TIMEOUT
 2. Scan two digits (01~60) from Full ASCII Code39 numeric table
(unit = 1 sec, range = 1 sec ~ 60 sec, Default = 60 sec)
 3. Scan LED AUTO-OFF TIMEOUT
-

FLASH TIMEOUT (FLASH MODE)

. F041\$



FLASH TIMEOUT
(DEFAULT = 60 SEC)

STEPS:

1. Scan FLASH TIMEOUT
 2. Scan two digits (03~60) from Full ASCII Code39 numeric table
(unit = 1 sec, range = 3 sec ~ 60 sec, Default = 60 sec)
 3. Scan FLASH TIMEOUT
-

LED AUTO-OFF TIMEOUT (CONTINUOUS AUTO OFF MODE)

. F042\$



LED AUTO OFF TIMEOUT
(DEFAULT = 60 SEC)

STEPS:

1. Scan LED AUTO OFF TIMEOUT
2. Scan two digits (03~60) from Full ASCII Code39 numeric table
(unit = 1 sec, range = 3 sec ~ 60 sec, Default = 60 sec)
3. Scan LED AUTO OFF TIMEOUT

GROUP-4

ADVANCED READING MODE SETTINGS

TRIGGER CONTROL (FLASH, CONTINUOUS & TEST MODE)

. F036\$



TRIGGER CONTROL DISABLE

. F037\$



TRIGGER CONTROL ENABLE

NOTE:

1. When enabled, LED can be switched on/off by pressing trigger.
-

IDENTICAL READ INTERVAL (FLASH, CONTINUOUS & CONTINUOUS AUTO OFF MODE)

. F040\$



IDENTICAL READ INTERVAL
(DEFAULT = 1.0 SEC)

NOTE:

1. The interval will start counting only after the scanned barcode is removed from the aimer of scanner. If you want to read the same barcode continuously without any timeout, please use Test Mode.

STEPS (for MT110(M), MT110L(M), MT300L):

1. Scan IDENTICAL READ TIMEOUT
2. Scan two digits (01~50) from Full ASCII Code39 numeric table (Group 46)
(unit = 100mS, range = 100mS ~ 5000mS, Default = 1000mS)
3. Scan IDENTICAL READ TIMEOUT

STEPS (for MT1297, MT100A, MT3000LB):

1. Scan IDENTICAL READ TIMEOUT
2. Scan two digits (1~5) from Full ASCII Code39 numeric table (Group 46)
(unit = 1 sec, range = 1 sec ~ 5 sec, Default = 1 sec)
3. Scan IDENTICAL READ TIMEOUT

GROUP-5

LASER BRIGHTNESS, ILLUMINATION

LASER BRIGHTNESS

. F045\$



DIM

. F044\$



BRIGHT

NOTE:

1. Supported by MT110L(M), MT300L, MT3000LB only.

ILLUMINATION

. F059\$



LASER ALWAYS ON,
LED ON AFTER 1 SEC

. F049\$



LASER ALWAYS ON,
LED AUTO-ADAPTIVE

. F048\$



LASER ALWAYS ON,
LED ALWAYS ON

. F047\$



LASER ALWAYS ON,
LED OFF

. F046\$



LASER OFF,
LED ALWAYS ON

NOTE:

1. Supported by MT110L(M), MT300L, MT3000LB only.

GROUP-6

BEEP TONE, BEEP MODE, TERMINATOR

BEEP TONE

.F019\$



BEEP HIGH

.F018\$



BEEP MEDIUM

.F012\$



BEEP OFF

.F022\$



BEEP LOW

BEEP MODE

.F023\$



NORMAL

.F025\$



MUTE

.F024\$



WARNING BEEP ONLY

TERMINATOR

.D010\$



NONE

.D011\$



LF

.D012\$



CR

.D013\$



CR+LF

.D014\$



TAB

.D015\$



SPACE

.D016\$



ESC

NOTES:

Below is the position of Terminator among output data string:

[Preamble] [Symbology ID] [Barcode Length] [Barcode Data] [Postamble] **[Terminator]**

By default, with Preamble, Postamble, Barcode Length and Symbology ID disabled, the scanner data output will be:

[Barcode Data] **[Terminator]**

1. For the USB HID/BT HID interface the default terminator is CR.
2. For the USB VCP/BT SPP interface the default terminator is CR+LF.

GROUP-7

SEND DATA LENGTH, PREAMBLE & POSTAMBLE

SEND DATA LENGTH

.D019\$



SEND DATA LENGTH ON

.D020\$



SEND DATA LENGTH OFF

PREAMBLE & POSTAMBLE (PREFIX AND SUFFIX)

.A011\$



CLEAR PRE/ POSTAMBLE

.A012\$



PREAMBLE (16)

.A013\$



POSTAMBLE (16)

EXAMPLE:

Set PREAMBLE String as “##”

POSTAMBLE String as “\$\$”

SETTING PROCEDURE:

STEP 1 : Scan : CLEAR PRE/ POSTAMBLE.

STEP 2 : Scan : PREAMBLE.

STEP 3 : Scan : “#” twice from FULL ASCII Table (Group 51)

STEP 4 : Scan : PREAMBLE.

STEP 5 : Scan : POSTAMBLE.

STEP 6 : Scan : “\$” twice from FULL ASCII Table (Group 51)

STEP 7 : Scan : POSTAMBLE.

DATA FORMAT:

[Preamble] [Symbology ID] [Barcode Length] [Barcode Data] [Postamble] [Terminator]

NOTES:

1. A PREAMBLE is a string of up to 16 characters added to the beginning of a scanned barcode.
2. A POSTAMBLE is a string of up to 16 characters added to the end of a scanned barcode.
3. Default value for both: None.

GROUP-8

ACCURACY ADJUSTMENT



**ACCURACY
ADJUSTMENT**



Accuracy Adjustment assures a more reliable decoded output. Enabling the feature and setting a number from 1 to 9 subjects the decoded output a higher standard of accuracy. The higher the number, the greater the accuracy.

STEPS:

1. Scan ACCURACY ADJUSTMENT.
2. Scan one digit (0~9) from barcode menu above.
(Default = 1)
3. Scan ACCURACY ADJUSTMENT.

NOTE:

1. The scanner will beep three times as indication that a setting is not yet complete or unexpected barcode is scanned during multi-step configuration.
2. If you make a mistake, forget a step, etc., and want to abort the multi-step configuration, scan RESET/ABORT and start over again.

RESET / ABORT



GROUP-9

INVERSE BARCODE, CODE ID

ENABLE INVERSE BARCODE

.D021\$



DISABLE INVERSE BARCODE
(READS POSITIVE BARCODE ONLY)

.D022\$



ENABLE INVERSE BARCODE
(READS POSITIVE & NEGATIVE BARCODES)

ENABLE CODE ID

.A008\$



FACTORY ID ON

.A014\$



AIM ID ON

.A015\$



SET ID ON

DISABLE CODE ID

.A009\$



NOTES:

1. Only ONE code ID will be sent.
2. The code ID is located at the position before the barcode data and after the preamble.

EXAMPLE :

- 1.Preamble 145287,
- 2.Code ID: enable AIM ID,
- 3.Bar code symbologies : EAN 13+5

145287	JE0	4563987123453	12411
Preamble 145287	CODE ID AIM ID : JE0	BARCODE / DATA EAN 13 +5	
OUTPUT : 145287JE0456398712345312411			

GROUP-10

SYBBOLOGIES CODE IDENTIFIER

Symbologies		Factory ID	AIM ID	
ID	Code 39	M	A0	
			A1	
			A3	
	Full ASCII Code 39	D	A4	
			A5	
			A7	
	Code 32		B	X0
	Codabar	N	F0	
			F1	
			F2	
			F4	
	Interleaved 2 of 5	I	I0	
			I1	
			I3	
	UK Plessey		P	P0
	IATA 2 of 5		R	R0
	Matrix 2 of 5		Y	X0
	Industrial 2 of 5		V	S0
	Code 11	J	H0	
			H0	
			H1	
			H3	
	MSI	O	M0	
			M1	
	Telepen	U	B0	
			B1	
	China Postal Code		H	X0
	EAN-13	F	E0	
			E3	
	UPC-A	A	E0	
E3				
EAN-8	S	E4		
		E4		
UPC-E	E	E0		
		E3		
Code 93		L	G0	
Code 128		K	C0	
GS1 128		T	C1	
GS1 Databar		G	e0	

GROUP-11

SET CODE ID

. P001\$



EAN 13 Set ID

. P002\$



EAN 8 Set ID

. P003\$



UPC E Set ID

. P004\$



UPC A Set ID

. P005\$



Code 39 Set ID

. P013\$



Code 93 Set ID

. P007\$



Codabar Set ID

. P021\$



IATA Set ID

. P010\$



Code 128 Set ID

. P016\$



EAN 128 Set ID

. P022\$



Telepen Set ID

. P009\$



Code 11 Set ID

STEPS:

1. Scan the SET ID barcode for a particular symbology.
2. Scan one or two alphanumeric characters from the Full ASCII Table.
3. Scan the SET ID barcode again.

NOTE:

1. The scanner will beep three times as indication that a setting is not yet complete or unexpected barcode is scanned during multi-step configuration.
2. If you make a mistake, forget a step, etc., and want to abort the multi-step configuration, scan RESET/ABORT and start over again.




RESET / ABORT

. P023\$



GROUP-12

SET CODE ID



STEPS:

1. Scan the SET ID barcode for a particular symbology.
2. Scan one or two alphanumeric characters from the Full ASCII Table.
3. Scan the SET ID barcode again.

NOTE:

1. The scanner will beep three times as indication that a setting is not yet complete or unexpected barcode is scanned during multi-step configuration.
2. If you make a mistake, forget a step, etc., and want to abort the multi-step configuration, scan RESET/ABORT and start over again.

RESET / ABORT



GROUP-13

INTERBLOCK DELAY, INTERCHARACTER DELAY

INTERBLOCK DELAY

. B001\$ 	<u>0mS</u>
. B002\$ 	10mS
. B003\$ 	50mS
. B004\$ 	100mS
. B005\$ 	200mS
. B006\$ 	500mS

INTERCHARACTER DELAY

. B010\$ 	<u>140uS</u>
. B011\$ 	500uS
. B012\$ 	1mS
. B013\$ 	4mS
. B014\$ 	16mS

GROUP-14

FUNCTION CODE, HT/CR/ESC CONVERSION

FUNCTION CODE CONVERSION

. C019\$



ENABLE

. C020\$



DISABLE

*Once disabled, the scanner will output the original encoded data of the barcodes in Full ASCII Table
- Function/Navigation/Modifier Keys (Group 48-50).

HT/CR/ESC CONVERTS TO TAB/ENTER/ESCAPE

. D025\$



HT/CR/ESC CONVERTS TO
TAB/ENTER/ESCAPE ENABLE

. D026\$



HT/CR/ESC CONVERTS TO
TAB/ENTER/ESCAPE DISABLE

NOTE:

1. By default, HT [\$I], CR [\$M] and ESC [%A] is transmitted as <0x09>, <0x0D> and <0x1B> respectively.
2. When enabled, HT [\$I], CR [\$M] and ESC [%A] is transmitted as <TAB>, <ENTER> and <ESCAPE> on keyboard respectively.

GROUP-15

KEYBOARD LAYOUT

KEYBOARD LAYOUT

. C010\$



ENGLISH (USA)

. C018\$



ENGLISH (UK)

. C012\$



FRENCH

. C011\$



GERMAN

. C014\$



ITALIAN

. C013\$



SPANISH

. C017\$



CZECH (QWERTY)

. C022\$



CZECH (QWERTZ)

. C021\$



HUNGARIAN (QWERTZ)

. C024\$



HUNGARIAN (101 KEY)

. C016\$



SWISS (GERMAN)

. C023\$



SWISS (FRENCH)

. C009\$



JAPAN (106 key)

. C025\$



CANADIAN (FRENCH)

. C034\$



CANADIAN (TRADITIONAL)

. C029\$



NORWEGIAN

. C026\$



SWEDISH

. C031\$



PORTUGUESE

. C030\$



BELGIAN (AZERTY)

. C028\$



DUTCH

. C027\$



DANISH

. C032\$



SLOVAK

. C033\$



BRAZILIAN (PORTUGUESE)

. C015\$



ALT CODE

GROUP-16

CAPITAL LOCK MODE, NUMERIC KEY

CAPITAL LOCK MODE



CAPSLOCK ON



CAPSLOCK OFF



CAPSLOCK FREE

NOTE:

1. When barcode scanner is set to Capslock Free mode, no matter keyboard Capslock LED indicator is ON or OFF, output will be always the same as the Original barcode. In other words, what you see is what output is.(CODABAR is the exception)
2. If ABCD/ ABCD, abcd/ abcd, ABCD/T*E, abcd/tn*e are on, they work independently according to their rules.

NUMERIC KEY



NUMERIC KEY



ALPHANUMERIC KEY

NOTE:

1. By default, the alphanumeric key is used for transmitting digits. Scan NUMERIC KEY if you want to use the keys on the numeric keypad.
2. If you select NUMERIC KEY, the Num Lock status of the physical keyboard should be ON.

GROUP-17

INTERFACE

INTERFACE

. E043\$



BT HID

Emulates a **Bluetooth HID keyboard** that transmits each barcode data to the host after decode.

. E042\$



BT SPP

Emulates a **Bluetooth SPP device** that transmits each barcode data in serial communication to the host after decode.

. C035\$



Memory Mode

Emulates a **USB mass storage device** that saves each barcode data during off-line data collection.

NOTE:

Not supported by MT100A.

. C008\$



USB HID

Emulates a **USB keyboard** that transmits each barcode data to the host after decode.

. C006\$



USB VCP

Emulates a **USB virtual com device** that transmit each barcode data to the host after decode. Driver is available on CD and our official website.

Function Support Matrix

Mode	Interface	On-line Operation	Off-line Operation	Ez Utility
Wireless	BT HID	✓		
	BT SPP	✓		
Tethered	Memory		✓	
	USB HID	✓		✓
	USB VCP	✓		✓

NOTE:

Ez Utility(PC-based software utility) is available from your local distributor or our website.

GROUP-18

BLUETOOTH PROFILE

BLUETOOTH PROFILE

. E043\$



(Recommended)

BT HID

1. Press the trigger for 1 second to activate the scanner.
2. Scan [**DISCONNECT**]
3. Scan [**BT HID**]; the scanner will emit several beeps.
4. Select "Wireless Scanner" from discovered device list.
(For PC, please click "Create a pairing code for me")
5. If Bluetooth application prompt you to enter a pincode, please follow the steps in **PINCODE SETUP** section the on next page.
6. The scanner will beep twice to verify the connection.

. E042\$



BT SPP

1. Press the trigger for 1 second to activate the scanner.
2. Scan [**DISCONNECT**]
3. Scan [**BT SPP**]; the scanner will emit several beeps.
4. Select "Wireless Scanner" from discovered device list.
(For PC, please click "Enter the device's pairing code")
6. If Bluetooth application prompt your to enter a pincode, enter "1234" from the host.
7. Open serial communication software with com port (see Device Manager) properly set up.
8. The scanner will beep twice to verify the connection.

. E031\$



Disconnect

GROUP-19

PINCODE SETUP

PINCODE SETUP

STEP 1

Pincode Start

.E032\$



STEP 2

Scan numeric barcodes (see **NUMERIC BARCODES** below) based on the pincode generated by the Bluetooth application.

NUMERIC BARCODES



1

6



2

7



3

8



4

9



5

0



STEP 3

Enter

\$TX



STEP 4

Pincode Stop

.E033\$



GROUP-20

GETTING CONNECTED, TOUCH KEYBOARD

Getting Connected - iOS & Android

1. Press the trigger for 1 second to power up the scanner.
2. Scan below configuration barcode to clear last pairing record.

• E031\$



Disconnect

3. Scan below configuration barcode; the scanner will emit several beeps.

• E043\$




BT HID

4. Select "Wireless Scanner" from discovered device list.




5. The scanner will beep twice to verify the connection.



Touch Keyboard - iOS

While connected with the scanner, the Touch Keyboard on the iOS device might disappear. To resolve this issue, please simply press the function button to toggle iOS Touch Keyboard.

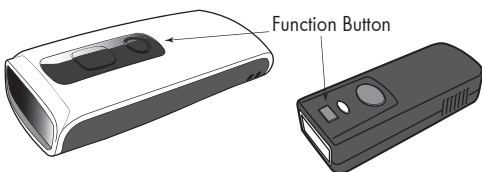


For scanner with only one button, please refer to iOS Hotkey in the next page.

Touch Keyboard - Android

While connected with the scanner, the Touch Keyboard on the Android smartphone or tablet might disappear. To resolve this issue, please change settings on Android device with below steps:

1. Enter "Settings"
2. Enter "Language & input"
3. Tap on "Default keyboard"
4. Turn off "Physical keyboard", or Turn on "On-screen keyboard" and the Touch Keyboard will function properly again.



GROUP-21

iOS HOTKEY, SET FUNCTION BUTTON

iOS HOTKEY

. E047\$



ENABLE iOS HOTKEY

. E048\$




DISABLE iOS HOTKEY

NOTE:

1. After enabling iOS Hotkey(disabled by default), you may simply double-click the trigger to toggle the iPhone/iPad Touch Keyboard.
2. Only supported by MT100A, MT3000LB.

SET FUNCTION BUTTON

You may define the data to be sent to the host when function button is pressed during connection.

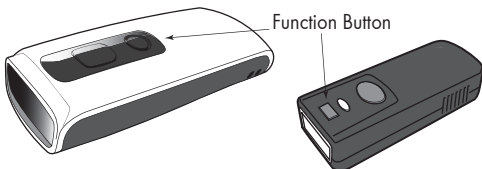

. E060\$



SET FUNCTION BUTTON
(DEFAULT = iOS Hotkey)

STEPS:

1. Scan SET FUNCTION BUTTON
2. Scan 1~16 alphanumeric from Full ASCII table
(range = 0x00 ~ 0x7F for BT SPP
= 0x00 ~ 0x7F & Function/Navigation/Modifier Keys for BT HID,
Default = iOS Hotkey)
3. Scan SET FUNCTION BUTTON

. E062\$



DEFAULT FUNCTION BUTTON

NOTE:

1. If you would like to reset function button to iOS Hotkey, simply scan Default Function Button.

GROUP-22

POWER OFF TIMEOUT

POWER OFF TIMEOUT

Variable Timeout

. B030\$



SET MINUTE
(DEFAULT = 03 MIN)

. B029\$



SET SECOND
(DEFAULT = 00 SEC)

The timeout is 3 minutes & 0 second by default, and is programmable from minimum of 10 seconds (00:10) to maximum of 60 minutes and 60 seconds (60:60)

For example, to set the timeout as 5 minutes 30 seconds:

1. Scan [Set Minute]
2. Scan [0] & [5] on below numeric barcode table.
3. Scan [Set Minute]
4. Scan [Set Second]
5. Scan [3] & [0] on below numeric barcode table.
6. Scan [Set Second]

No Timeout (Scanner Always On)

. B021\$



DISABLE
TIMEOUT

NUMERIC BARCODES



1

6



2

7



3

8



4

9



5

0



GROUP-23

SET BLUETOOTH DEVICE ID

SET BLUETOOTH DEVICE ID

To customize your own Bluetooth device name for the wireless scanner, please follow below steps:

STEP 1

Default Wireless ID

. B022\$



STEP 2

Set Wireless ID

. B023\$



STEP 3

Scan up to 16 alphanumeric characters from Full ASCII Table (Group 51-57) as your desired Device ID.

STEP 4

Set Wireless ID

. B023\$



STEP 5

Scan a desired BT mode in **BLUETOOTH PROFILE** (Group 18) to complete the configuration.

NOTE:

1. If you have connected the scanner with the host BEFORE customizing your Bluetooth device name, please remove the device and create a new connection to make sure device name is refreshed. For PC, it is recommended to restart the Bluetooth adaptor in order to refresh device name.
2. At Step 3, the scanner will beep three times as an alert that more than 16 characters are entered.
3. To reset the Bluetooth device name to default ("Wireless Scanner"), please simply do Step1 & Step 5, skipping Step 2 to Step 4.

GROUP-24

SET SPP PINCODE

SET SPP PINCODE

By default, the pincode under SPP profile for the scanner is "1234". You may customize this pincode with below steps:

STEP 1

Set SPP Pincode

. B024\$



STEP 2

Scan numeric barcodes (see **NUMERIC BARCODES** below)
Up to 8 numbers can be set as SPP Pincode.

NUMERIC BARCODES



1

6



2

7



3

8



4

9



5

0



STEP 3

Set SPP Pincode

. B024\$



STEP 4

Scan a desired BT mode in **BLUETOOTH PROFILE** (Group 21)
to complete the configuration.

GROUP-25

SCANLINK (SPP/HID MASTER MODE)

SCANLINK

ScanLink is a connection method that turns the scanner into a master device, which initiates the Bluetooth connection with the target host device (now a slave device). This, as a result, saves user the trouble of going through numerous setup procedures on the host device to establish connection.

There are two types of ScanLink operation:

SCANLINK via Bluetooth HID/SPP Profile

First, please generate one ScanLink barcode for the target slave device in below methods:

1. The barcode must be Code 39 with no checksum
2. Barcode data format: HID(or SPP) + device's MAC address

For example, the target slave device's MAC address is 001583522C3B.

Please encode:

HID001583522C3B in Code39 barcode.

or

SPP001583522C3B in Code39 barcode.

Now, you may establish Bluetooth connection with only one scan on the ScanLink barcode.


*Note: Please check the your host device's compatibility before using ScanLink function via either of the profiles.

SCANLINK with Wireless Dongle

Wireless Dongle, authorized or manufactured by our company, usually have a ScanLink barcode on its product label or on its extra Set Connection label. Simply scanning the ScanLink barcode on either one of the labels will create Bluetooth connection.



<Set Connection label>

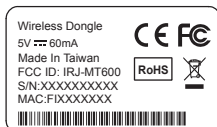

<Product Label>

GROUP-26

SPP REMOTE CONTROL, SHUT DOWN

SPP REMOTE CONTROL

You may control/interact with scanner using below commands over SPP profile.

Aloha

Host sends: CR,LF,{A,L},CR,LF (8 bytes)
Scanner replys: O,K,CR,LF (4 bytes)

Beep

Host sends: CR,LF,{M,1},CR,LF (8 bytes)
or Host sends: CR,LF,{BEL},CR,LF (7 bytes)
Scanner reacts: Emits a short beep for 80mS

Vibration

Host sends: CR,LF,{B,Z},CR,LF (8 bytes)
Scanner reacts: Vibrates for 200mS

NOTE:

1. Not supported by MT100A, MT3000LB.

Good Read LED Indication

Host sends: CR,LF,{G,L},CR,LF (8 bytes)
Scanner reacts: Turns on good read LED for 200mS

Start Scanning

Host sends: CR,LF,{T,G},CR,LF (8 bytes)
Scanner reacts: Starts scanning (LED Illumination On)

NOTE:

1. Only applicable for Trigger & Toggle Mode.

Stop Scanning

Host sends: CR,LF,{T,S},CR,LF (8 bytes)
Scanner reacts: Stops scanning (LED Illumination Off)

NOTE:

1. Only applicable for Trigger & Toggle Mode.

SHUT DOWN

This configuration barcode will shut down the scanner immediately but still reserve the pairing record.

. E255\$



SHUT DOWN

GROUP-27

BATCH MODE, BINARY CHECK CHARACTER

BATCH MODE



When out of range, the scanner will temporarily keep scanned data in its memory buffer(2K RAM) until the buffer is full. When back in range, the scanner will send all stored data back to the host.

NOTE:

1. Batch Mode will not function when Memory Mode is enabled, or no connection is made beforehand.
2. Not supported by MT1297.

BINARY CHECK CHARACTER



Once enabled, a checksum will be added to the end of each data to conduct Xor calculation. For Bluetooth SPP & USB-VCP, the BCC is 1 byte. For Bluetooth HID, the BCC are 2 bytes.

Example:

The barcode data is "TEST" with terminator <CR><LF>

1. Bluetooth SPP & USB-VCP:

Data Format = <T> + <E> + <S> + <T> + <CR> + <LF> + <BCC>

BCC = 54h ^ 45h ^ 53h ^ 54h ^ 0Dh ^ 0Ah = 11h

2. Bluetooth HID:

Data Format = <T> + <E> + <S> + <T> + <Enter> + <BCC>

BCC = 54h ^ 45h ^ 53h ^ 54h ^ E7h = F1h

However, since control character cannot be displayed in Bluetooth HID, BCC will be converted into 2 bytes of characters. As a result, the data will be: TEST + <Enter> + F + 1

GROUP-28

MEMORY MODE, DELETE RECORD

MEMORY MODE

. C035\$



MEMORY MODE

After scanning the above barcode, the scanner will be able to collect barcode data off-line. The barcode data will be stored in the format of:

< **Date** >, < **Time** >, < **Barcode Data** > < **CR** >

To retrieve stored data, please connect the scanner to the host with cable, access removable storage device "**MiniScan**" from which you may open or copy the file "**BARCODE.txt**" to your computer.

To exit Memory Mode, simply scan any interface barcode in **INTERFACE** (Group 17)

NOTE:

Memory Mode (Group 28-30) is not supported by MT100A.

DELETE LAST RECORD

. R005\$



DELETE LAST RECORD

To delete ONE stored data, please scan below barcode or press the function button.

CLEAR ALL RECORD

To delete ALL stored data, simply delete the file "**BARCODE.txt**" in the removable storage device "**MiniScan**" until you hear two beeps.

GROUP-29

DATA FORMAT, DATE & TIME SETUP

DATA FORMAT

. R011\$



DATA FORMAT

The default Data Format is <Date>, <Time>, <Barcode Data>
below are items and their setup codes:

Code	Item	Code	Item
2	Date	4	Barcode Data
3	Time		

Example:

To change Data Format to <Barcode Data>, <Date>, <Time>

1. Scan [Data Format]
2. Scan [4], [2], [3] from Full ASCII numeric table (Group 57)
3. Scan [Data Format]

. R010\$



FIELD SEPARATOR

Default is comma (,). You may replace it with any alphanumeric characters from the full ASCII table.

Example: To change Field Separator to Semicolon (;)

1. Scan [Field Separator]
2. Scan [;] from the full ASCII table (Group 51)
3. Scan [Field Separator]

DATE & TIME SETUP

SET DATE

. R006\$



Example: To set Date to 2012-08-01 (Year-Month-Day):

1. Scan [Set Date]
2. Scan [1], [2], [0], [8], [0], [1] from Full ASCII numeric table (Group 57)
3. Scan [Set Date]

SET TIME

. R007\$



Example: To set Time to 08:10:30 am (Hr:Min:Sec)

1. Scan [Set Time]
2. Scan [0], [8], [1], [0], [3], [0] from Full ASCII numeric table (Group 57)
3. Scan [Set Time]

* To avoid Time and Date being reset to factory default due to running out of battery, please fully charge the scanner for at least 3 hours before use.

GROUP-30

DATE FORMAT, TIME FORMAT

DATE FORMAT

. R008\$



DATE FORMAT

The default Date Format is DD/MM/YYYY (Code = 09), below is full list of available formats and their setup codes:

Code	Format	Code	Format
01	DD-MM-YYYY	09	DD/MM/YYYY
02	MM-DD-YYYY	10	MM/DD/YYYY
03	DD-MM-YY	11	DD/MM/YY
04	MM-DD-YY	12	MM/DD/YY
05	YYYY-MM-DD	13	YYYY/MM/DD
06	YY-MM-DD	14	YY/MM/DD
07	DD-MM	15	DD/MM
08	MM-DD	16	MM/DD

Example:

To set Date Format to MM/DD/YY (Code =12)

1. Scan [Date Format]
2. Scan [1], [2] from Full ASCII numeric table (Group 57)
3. Scan [Date Format]

TIME FORMAT

. R009\$

TIME FORMAT



The default Time Format is HH:MM:SS (Code = 01), below are available formats and their setup codes:

Code	Format	Code	Format
01	HH:MM:SS	02	HH:MM

Example:

To set Time Format to HH:MM (Code = 02)

1. Scan [Time Format]
2. Scan [0], [2] from Full ASCII numeric table (Group 57)
3. Scan [Time Format]

GROUP-31

ENABLE/ DISABLE SYMBOLOGIES

ENABLE



ENABLE ALL CODE



CODE 32



CHINA POSTAL CODE



UK PLESSEY CODE



INDUSTRIAL 2 OF 5



MATRIX 2 OF 5



INTERLEAVED 2 OF 5



CODE 128



CODABAR



TELEPEN

DISABLE



DISABLE ALL CODE



CODE 32



CHINA POSTAL CODE



UK PLESSEY CODE



INDUSTRIAL 2 OF 5



MATRIX 2 OF 5



INTERLEAVED 2 OF 5



CODE 128



CODABAR



TELEPEN

GROUP-32

ENABLE/ DISABLE SYMBOLOGIES

ENABLE



UPC-A



UPC-E



EAN-8



EAN-13



MSI



CODE 39



CODE 11



CODE 93



EAN/UCC/GS1-128



IATA

DISABLE



UPC-A



UPC-E



EAN-8



EAN-13



MSI



CODE 39



CODE 11



CODE 93



EAN/UCC/GS1-128



IATA

GROUP-33

ENABLE/DISABLE SYMBOLOGIES, CHINA POSTAL CODE

ENABLE

. N032\$



GS1 DATABAR

. N038\$



GS1 DATABAR STACKED

. N010\$



GS1 DATABAR LIMITED

. N026\$



GS1 DATABAR EXPANDED

. N028\$



GS1 DATABAR EXPANDED STACKED

DISABLE

. N033\$



GS1 DATABAR

. N039\$



GS1 DATABAR STACKED

. N011\$



GS1 DATABAR LIMITED

. N027\$



GS1 DATABAR EXPANDED

. N029\$



GS1 DATABAR EXPANDED STACKED

CHINA POSTAL CODE

[TOSHIBA CODE]

. K004\$



CDV & SEND CD

. K005\$



CDV & NOT SEND CD

. K006\$



MIN LENGTH (11)

. K007\$



MAX LENGTH (48)

. K001\$



ENABLE

. K002\$



DISABLE

. K003\$



DISABLE CDV

GROUP-34

MSI CODE, UK PLESSEY CODE

. L001\$



ENABLE

. L002\$



DISABLE

. L004\$



CDV & SEND CD

. L003\$



CDV & NOT SEND CD

. L007\$



CHECK DIGIT DOUBLE
MOD 10

MSI

. L008\$



CHECK DIGIT DOUBLE 11
PLUS MOD 10

. L009\$



CHECK DIGIT SINGLE
MOD 10

. L005\$



MIN LENGTH (06)

. L006\$



MAX LENGTH (48)

. L010\$



ENABLE

. L011\$



DISABLE

UK PLESSEY CODE

. L012\$



CDV & SEND CD

. L013\$



CDV & NOT SEND CD

GROUP-35

CODE 93, IATA, TELEPEN



CODE 93



IATA



TELEPEN



GROUP-36

INTERLEAVED 2 OF 5, CODE 11



INTERLEAVED 2 OF 5



CODE 11



GROUP-37

INDUSTRIAL 2 OF 5, MATRIX 2 OF 5

. N001\$



ENABLE

. N002\$



DISABLE

. N003\$



DISABLE CDV

. N004\$



CDV & SEND CD

INDUSTRIAL 2 OF 5

. N005\$



CDV & NOT SEND CD

. N006\$



MIN LENGTH (06)

. N007\$



MAX LENGTH (48)

. M010\$



ENABLE

. M011\$



DISABLE

. M012\$



DISABLE CDV

. M013\$



CDV & SEND CD

MATRIX 2 OF 5

. M014\$



CDV & NOT SEND CD

. M015\$



MIN LENGTH (06)

. M016\$



MAX LENGTH (48)

GROUP-38

CODABAR



CODABAR



START / STOP



Example of ST (Start) / SP (Stop)

123456	Not Transmit ST/SP
A123456B	ST/SP: ABCD/ABCD
a123456b	ST/SP: abcd/abcd
A123456N	ST/SP: ABCD/TN*E
a123456n	ST/SP: abcd/tn*e



CLSI FORMAT

CLSI - Enable library space insertion. If you enable the CLSI format, this option inserts spaces in position 2, 7, 13 of the data string for use in library systems.

GROUP-39

ABC- CODABAR, CX- CODABAR



ON



OFF



SET INSERT DATA*

ABC- CODABAR



INSERT DATA- ON



INSERT DATA- OFF

* The data can be any alphanumerics of FULL ASCII Table (GROUP 51-57)

NOTE:

ABC-CODABAR (American Blood Commission). The ABC Code is an acronym for American Blood Commission. This bar code is a variant of the CODABAR Code developed for the use in the blood bank. This Code consists of two bar codes which are decoded in one read cycle. The code is concatenated when the stop character of the first bar code and the start character of the second bar code is a " D ", these two " D " are not transmitted.



ON



OFF



SET INSERT DATA*

CX CODE- CODABAR



INSERT DATA- ON



INSERT DATA- OFF

* The data can be any alphanumerics of FULL ASCII Table (GROUP 51-57)

NOTE:

The CX-Code consists of two bar codes which are decoded in one read cycle, the code is concatenated when the stop character of the first bar code is a C, and the start character of the second bar code is a B. The B and C characters are not transmitted.

GROUP-40

CODABAR COUPLING, ADJACENT REQUIRED



ON



OFF



SET INSERT DATA*

CODABAR COUPLING



INSERT DATA - ON



INSERT DATA- OFF

ABC-Codabar and CX-Codabar have certain rules regarding the Stop Character of first bar code and the stop character of second bar code while in conjunction, while Codabar-Coupling is enabled, the data from any two Codabar bar codes can be coupled into one set of data without any limitations between the Stop character of first bar code and the Start character of second bar code. The Start and Stop characters associated with each bar code will be sent.

* *The data can be any alphanumerics of FULL ASCII Table (GROUP 51-57)*

ADJACENT REQUIRED

If CODABAR ADJACENT is enabled, the scanner will only read two adjacent Codabar bar codes; a single barcode will not be read.

NOTE:

1. Both ABC-Codabar and CX-Codabar can be enabled together, except when Codabar-Coupling is also enabled.
2. If ABC-Codabar, CX-Codabar, and Codabar-Coupling are all enabled at the same time, the scanner will read only Codabar-Coupling, that is, ABC-Codabar, CX-Codabar will be considered coupling formats.



ON



OFF

STEPS:

1. Scan SET INSERT DATA.
2. Scan any combination of alphanumeric characters from FULL ASCII Table.
3. Scan SET INSERT DATA.

NOTE:

1. The scanner will beep three times as indication that a setting is not yet complete or unexpected barcode is scanned during multi-step configuration.
2. If you make a mistake, forget a step, etc., and want to abort the multi-step configuration, scan RESET/ABORT and start over again.

RESET / ABORT



GROUP-41

STANDARD & FULL ASCII CODE 39, CODE 32

STANDARD CODE 39 & FULL ASCII 39



NOTE:

The default for Code 39 is Standard Code 39. If Full ASCII Code 39 is enabled, Standard Code 39 will be automatically disabled.



CODE 32



GROUP-42

UPC-E

. H007\$



ENABLE

. H008\$



DISABLE

. H009\$



LEAD DIGIT SEND

. H010\$



LEAD DIGIT NO SEND

. H011\$



CHECK DIGIT SEND

. H012\$



CHECK DIGIT NO SEND

. H037\$



+5 ON

. H038\$



+ 5 OFF

. H039\$



+2 ON

. H040\$



+ 2 OFF

ADD ON SUPPLEMENT

. H047\$



ADD A SPACE ON

. H048\$



ADD A SPACE OFF

. H056\$



ADDENDA REQUIRED ON

. H055\$



ADDENDA REQUIRED OFF

NOTE:

If ADDENDA REQUIRED is set to ON, the scanner will only read an UPC-E barcode that has an addenda. At the same time please also scan +5 ON or +2 ON so the scanner will output a 5-digit or 2-digit addendum.

GROUP-43

UPC-E SYSTEM NUMBER, UPC-E EXPAND TO UPC-A

UPC-E0

. H064\$



E (0) OFF

. H063\$



E (0) ON

UPC-E1

. H065\$



E (1) ON

. H066\$



E (1) OFF

NOTE:

Most UPC bar codes lead with 0 number systems, for these bar codes use UPC E(0) selection. For the bar codes that lead with the 1 number, use UPC E(1) selection.

UPC-E EXPAND TO UPC-A

. H053\$



ENABLE

. H054\$



DISABLE

NOTE:

1. If UPC-E EXPAND TO UPC-A FORMAT is enabled, the output of UPC-A will be 12 digits.
2. The default output of UPC-A is 12 digits, if UPC-A EXPAND TO EAN13 is enabled, a zero will be added to the front of the barcode.

GROUP-44

UPC- A



UPC- A



UPC-A EXPAND TO EAN-13



ADD ON SUPPLEMENT



NOTE:

If ADDENDA REQUIRED is set to ON, the scanner will only read an UPC-A barcode that has an addenda. At the same time please also scan +5 ON or +2 ON so the scanner will output a 5-digit or 2-digit addendum.

GROUP-45

EAN 8



ENABLE



DISABLE



LEAD DIGIT SEND



LEAD DIGIT NO SEND



CHECK DIGIT SEND



CHECK DIGIT NO SEND



+ 5 ON



+ 5 OFF



+ 2 ON



+ 2 OFF

ADD ON SUPPLEMENT



ADD A SPACE ON



ADD A SPACE OFF



ADDENDA REQUIRED ON



ADDENDA REQUIRED OFF

NOTE:

If ADDENDA REQUIRED is set to ON, the scanner will only read an EAN-8 barcode that has an addenda. At the same time please also scan +5 ON or +2 ON so the scanner will output a 5-digit or 2-digit addendum.

GROUP-46

EAN13, ISBN, ISSN, ISMN

. H013\$



ENABLE

. H014\$



DISABLE

. H015\$



LEAD DIGIT SEND

EAN-13

. H016\$



LEAD DIGIT NO SEND

. H017\$



CHECK DIGIT SEND

. H018\$



CHECK DIGIT NO SEND

. H025\$



+ 5 ON

. H026\$



+ 5 OFF

. H027\$



+ 2 ON

. H028\$



+ 2 OFF

ADD ON SUPPLEMENT

. H041\$



ADD A SPACE ON

. H042\$



ADD A SPACE OFF

. H058\$



ADDENDA REQUIRED ON

. H057\$



ADDENDA REQUIRED OFF

. H050\$



ISBN OFF

ISBN

. H049\$



ISBN ON

NOTES:

1. If ADDENDA REQUIRED is set to ON, the scanner will only read an EAN-13 bar code that has an addenda.
2. Either ISSN or ISBN will be considered as an extension of EAN-13. If ISSN or ISBN needs to be read, EAN-13 must be enabled. If ISSN and ISBN need to be read with addenda, EAN-13 must be enabled with ADDENDA REQUIRED set to ON, and +2 ON or +5 ON must be enabled as well.

. H052\$



ISSN OFF

ISSN

. H051\$



ISSN ON

NOTE:

Both ISSN and ISBN are the extension codes of EAN-13. If scanner is required to read either ISSN or ISBN, EAN-13 must be enabled. Otherwise the scanner will not be able to read ISSN or ISBN.

. H070\$



ISMN OFF

ISMN

. H069\$



ISMN ON

GROUP-47

EAN/UCC/GS1-128, CODE 128



EAN/UCC/GS1-128



The first FNC1 character is translated to Jc1, and the second FNC1 character is translated to an ASCII <GS> character (scan from Group 51-57)

String format:

Jc1	DATA CHARACTERS	<GS>	DATA CHARACTERS
-----	-----------------	------	-----------------

STEPS:

1. Scan DEFINE FNC1.
2. Scan one ASCII Code (Group 51-57)
3. Scan DEFINE FNC1.

CODE 128



GROUP-48

GS1 DATABAR, LIMITED, EXPANDED

. N032\$ GS1 DataBar (RSS-14) - OMNI & STACKED



GS1 DataBar ENABLE



GS1 DataBar CHECK DIGIT SEND



GS1 DataBar PREFIX SEND



GS1 DataBar STACKED ENABLE

. N033\$



GS1 DataBar DISABLE

. N035\$



GS1 DataBar CHECK DIGIT NOT SEND

. N037\$



GS1 DataBar PREFIX NOT SEND

. N039\$



GS1 DataBar STACKED DISABLE



GS1 DataBar LIMITED ENABLE



GS1 DataBar LIMITED CHECK DIGIT SEND



GS1 DataBar LIMITED PREFIX SEND

GS1 DataBar (RSS-14) - LIMITED

. N011\$



GS1 DataBar LIMITED DISABLE

. N013\$



GS1 DataBar LIMITED CHECK DIGIT NOT SEND

. N025\$



GS1 DataBar LIMITED PREFIX NOT SEND



GS1 DataBar EXPANDED ENABLE



GS1 DataBar EXPANDED STACKED ENABLE



GS1 DataBar EXPANDED
MIN LENGTH (01)

GS1 DataBar (RSS-14) - EXPANDED

. N027\$



GS1 DataBar EXPANDED DISABLE

. N029\$



GS1 DataBar EXPANDED STACKED DISABLE

. N031\$



GS1 DataBar EXPANDED
MAX LENGTH (74)

GROUP-49

FULL ASCII TABLE (CODE 39)
CONTROL CODES

%L		NUL
\$A		SOH
\$B		STX
\$C		ETX
\$D		EOT
\$E		ENQ
\$F		ACK
\$G		BEL
\$H		BS
\$I		HT
\$J		LF
\$K		VT
\$L		FF
\$M		CR
\$N		SO
\$O		SI

GROUP-50

FULL ASCII TABLE (CODE 39) CONTROL CODES

DLE	\$P 
DC1	\$Q 
DC2	\$R 
DC3	\$S 
DC4	\$T 
NAK	\$U 
SYN	\$V 
ETB	\$W 
CAN	\$X 
EM	\$Y 
SUB	\$Z 
ESC	%A 
FS	%B 
GS	%C 
RS	%D 
US	%E 
SP	

GROUP-51

FULL ASCII TABLE (CODE 39) SYMBOLS

+		+
-		-
.		.
\$		\$
%		%
/		/
%L		\
/ A		!
%V		@
/ C		#
%N		^
%S		~
/ F		&
/ J		*
%□		-
%H		=
%□		

GROUP-52

FULL ASCII TABLE (CODE 39) SYMBOLS

{	%P 
}	%R 
[%K 
]	%M 
(/ H 
)	/ I 
<	%G 
>	%I 
,	%W 
"	/ B 
'	/ G 
,	/ L 
;	%F 
:	/ Z 
?	%J 
DEL	%T 

GROUP-53

FULL ASCII TABLE (CODE 39)
UPPER CASE ALPHABETS



A



B



C



D



E



F



G



H



I



J



K



L



M


GROUP-54

FULL ASCII TABLE (CODE 39)
UPPER CASE ALPHABETS


N 

O 

P 

Q 

R 

S 

T 

U 

V 

W 

X 

Y 

Z 

GROUP-55

FULL ASCII TABLE (CODE 39)
LOWER CASE ALPHABETS

+A  a

+B  b

+C  c

+D  d

+E  e

+F  f

+G  g

+H  h

+I  i

+J  j

+K  k

+L  l

+M  m

GROUP-56

FULL ASCII TABLE (CODE 39) LOWER CASE ALPHABETS

n 

o 

p 

q 

r 

s 

t 

u 

v 

w 

x 

y 

z 

GROUP-57

FULL ASCII TABLE (CODE 39)
NUMBERS



0



1



2



3



4



5



6



7



















8



9














GROUP-58

FULL ASCII TABLE (CODE 39) FUNCTION KEYS

F1	\$TA	
F2	\$TB	
F3	\$TC	
F4	\$TD	
F5	\$TE	
F6	\$TF	
F7	\$TG	
F8	\$TH	
F9	\$TI	
F10	\$TJ	
F11	\$TK	
F12	\$TL	
Home	\$TM	
End	\$TN	
Enter (Numeric Key)	\$T+D	
App	\$T+□	

GROUP-59

FULL ASCII TABLE (CODE 39)
NAVIGATION KEYS

\$T0		Cursor Right
\$TP		Cursor Left
\$TQ		Cursor Up
\$TR		Cursor Down
\$TS		Page Up
\$TT		Page Down
\$TU		Tab
\$TV		Back Tab
\$TW		Esc
\$TX		Enter
\$TY		BS
\$TZ		Ins
\$T%K		Del

GROUP-60

FULL ASCII TABLE (CODE 39)
MODIFIER KEYS

\$T%L



Alt (Left) make *1

\$T+E



Alt (Right) make

\$T%N



Shift (Left) make *2

\$T+I



Shift (Right) make

\$T+K



Win (Left) make

\$T+M



Win (Right) make

\$T%W



Ctrl (Left) make *3

\$T+G



Ctrl (Right) make

\$T%M



Alt (Left) break

\$T+F



Alt (Right) break

\$T%O



Shift (Left) break

\$T+J



Shift (Right) break

\$T+L



Win (Left) break

\$T+N



Win (Right) break

\$T+A



Ctrl (Left) break

\$T+H



Ctrl (Right) break

For UK Keyboard Special Character

\$T+B



\$T+C



£

Note:

- *1: When "Alt(Left)Make" is programmed, please scan "Alt(Left)Break" to resume barcode setting.
*2: When "Shift(Left)Make" is programmed, please scan "Shift(Left)Break" to resume barcode setting.
*3: When "Ctrl(Left)Make" is programmed, please scan "Ctrl(Left)Break" to resume barcode setting.

APPENDIX 1

DEFAULT TABLE 1

GROUP	PARAMETER	DEFAULT
1	Setup Code Read	On
2	Reading Mode	Trigger Mode
3	LED Auto-Off Control	Disable
	LED Auto-Off Timeout (Trigger, Toggle, Flash...)	60 sec
	Flash Timeout	60 sec
	LED Auto-Off Timeout (Continuous Auto Off)	60 sec
4	Trigger Control	Disable
	Identical Read Interval	1.0 sec
5	Laser Brightness	Dim
	Illumination	Laser Always ON, LED ON After 1 Sec
6	Beep Tone	Beep Medium
	Beep Mode	Normal
	Terminator	CR(HID); CR+LF(VCP/SPP)
	Send Data Length	Off
7	Preamble & Postamble	None
8	Accuracy Adjustment	1
9	Inverse Barcode	Disable
	Code ID	Disable
11~12	Set Code ID	None
13	Interblock Delay	0 ms
	Intercharacter Delay	140 us
14	Function Code Conversion	Enable
	HT/CR/ESC Conversion	Disable
15	Keyboard Layout	English (USA)
16	Capital Lock Mode	Off
	Numeric Key	Alphanumeric Key
17	Interface	N/A (not affected by Default)
18	Bluetooth Profile	N/A (not affected by Default)
19	Pincode Setup	N/A
21	iOS Hotkey	Disable
	Set Function Button	iOS Hotkey
22	Power Off Timeout	3 minutes & 0 second
23	Set Wireless ID	Wireless Scanner
24	Set SPP Pincode	1234
27	Batch Mode	Disable
	Binary Check Character	Disable
28	Memory Mode	N/A (not affected by Default)
29	Data Format	<Date><Time><Barcode Data>
	Field Separator	,
30	Date Format	DD/MM/YYYY
	Time Format	HH.MM:SS
31~33	Enable and Disable Symbologies	
	Code 32	Disable
	China Postal Code	Disable
	UK Plessey Code	Disable
	Industrial 2 of 5	Disable
	Matrix 2 of 5	Disable
	Interleaved 2 of 5	Enable
	Code 128	Enable
	Codabar	Enable
	Telepen	Disable
	UPC-A	Enable
	UPC-E	Enable
	EAN-8	Enable
	EAN-13	Enable
	MSI	Disable
	Code 39	Enable
	Code 11	Disable
	Code 93	Disable
	EAN/UCC/GS1-128	Enable
	IATA	Disable
	GS1 Databar	Disable
	GS1 Databar Stacked	Enable
	GS1 Databar Limited	Disable
	GS1 Databar Expanded	Disable
	GS1 Databar Expanded Stacked	Enable

APPENDIX 1

DEFAULT TABLE 2

GROUP	PARAMETER	DEFAULT
33	China Post Code (Toshiba Code)	
	Enable/Disable	Disable
	Check Digits	Disable CDV
	Min Length	11 digits
	Max Length	48 digits
34	MSI	
	Enable/Disable	Disable
	Check Digits	CDV & send CD
	Check Digits Mode	Single Mod 10
	UK Plessey Code	
	Enable/Disable	Disable
	Check Digits	CDV & not send CD
35	Code 93	
	Enable/Disable	Disable
	Min Length	6 digits
	Max Length	48 digits
	IATA	
	Enable/Disable	Disable
	Check Digits	Disable CDV
	Min Length	6 digits
	Max Length	48 digits
	Telepen	
Enable/Disable	Disable	
	Telepen ASCII/Number	ASCII
36	Interleaved 2 of 5	
	Enable/Disable	Enable
	Check Digits	Disable CDV
	First/ last digit suppressed	No suppressed
	Min Length	6 digits
	Max Length	48 digits
	Code 11	
	Enable/Disable	Disable
	Check Digits	Disable CDV
	CDV & Send CD (1 Digit/2 Digits)	1 digit
Min Length	6 digits	
Max Length	32 digits	
37	Industrial 2 of 5	
	Enable/Disable	Disable
	Check Digits	Disable CDV
	Min Length	6 digits
	Max Length	48 digits
	Matrix 2 of 5	
	Enable/Disable	Disable
	Check Digits	Disable CDV
	Min Length	6 digits
Max Length	48 digits	
38	Codabar	
	Enable/Disable	Enable
	Check Digits	Disable CDV
	Min Length	6 digits
	Max Length	48 digits
	ST/SP; Abcd/abcd, abcd/tn*c, ABCD/ABCD,ABCD/TN*C	ABCD/ABCD
	Send Start/Stop	Send
CLSI Format	Off	
39	ABC-Codabar	
	ON/OFF	Off
	Insert Data	Off
	CX-Codabar	
	ON/OFF	Off
Insert Data	Off	
40	Codabar-Coupling	
	ON/OFF	Off
	Insert Data	Off
	Adjacent Required	Off

APPENDIX 1

DEFAULT TABLE 3

GROUP	PARAMETER	DEFAULT
41	Code 39	
	Full ASCII 39 Enable/Disable	Enable
	Check Digits	Disable CDV
	Start/Stop	Not Send
	Min Length	1 digit
	Max Length	48 digits
	Code 32	
	Enable/Disable	Disable
	Leading	Send
Tailing	Send	
42	UPC-E	
	Enable/Disable	Enable
	Check Digits	Send
	Lead Digits	Send
	Add a space	Off
	Addenda required	Off
	+5 On/Off	Off
	+2 On/Off	Off
43	UPC-E System Number, UPC-E Expand to UPC-A	
	UPC E(0) On/Off	On
	UPC E(1) On/Off	Off
	UPC-E expand to UPC-A	Disable
44	UPC-A, UPC-A Expand to EAN-13	
	Enable/Disable	Enable
	Check Digits	Send
	Lead Digits	Send
	UPC-A expand to EAN-13	Disable
	Add a space	Off
	Addenda required	On
	+5 On/Off	Off
+2 On/Off	Off	
45	EAN-8	
	Enable/Disable	Enable
	Check Digits	Send
	Lead Digits	Send
	Add a space	Off
	Addenda required	On
	+5 On/Off	Off
	+2 On/Off	Off
46	EAN-13	
	Enable/Disable	Enable
	Check Digits	Send
	Lead Digits	Send
	Add a space	Off
	Addenda required	On
	+5 On/Off	Off
	+2 On/Off	Off
	ISBN	Off
	ISSN	Off
	ISMN	Off
47	EAN/UCC/GS1-128	
	Enable/Disable	Enable
	Code ID	Disable
	Func 1 Char Send	Not Send
	Code 128	
	Enable/Disable	Enable
	Check Digits	Disable CDV
	Min Length	5 digits
	Max Length	48 digits

APPENDIX 1

DEFAULT TABLE 4

GROUP	PARAMETER	DEFAULT
48	GS1 Databar	
	GS1 Databar	Disable
	GS1 Databar Check Digit	Not Send
	GS1 Databar Prefix	Not Send
	GS1 Databar Stacked	Enable
	GS1 Databar Limited	Disable
	GS1 Databar Limited Check Digit	Not Send
	GS1 Databar Limited Prefix	Not Send
	GS1 Databar Expanded	Disable
	GS1 Databar Expanded Stacked	Enable
	GS1 Databar Expanded Min Length	1 digit
	GS1 Databar Expanded Max Length	74 digits